

ILLUMINATION PRESENTS  
**MINIONS**



**MINIONS MILKSHAKE MAKER  
INSTRUCTIONS FOR USE**

Product Ref 2145. Voltage: 220-240V, 50HZ. Power: 100W. V1

Thank you for purchasing this product. Please take time to read these instructions – they have been written to ensure you get the very best from your purchase.

## PRODUCT SAFETY

When using electrical appliances, basic safety precautions should always be followed including;

1. Carefully read through this instruction manual and warning texts before using this appliance, save this instruction manual for future reference.
2. Always ensure the appliance is only used by a responsible adult.
3. Always use this appliance on a stable level surface.
4. Always ensure that hands are dry before handling the plug or switching on the appliance.
5. Never immerse the appliance cord or plug into water or any liquid. This is to protect against electric shock.
6. Always carry out regular checks on the appliance and power cord. In order to avoid hazard, should there be any sign of damage, do not attempt to use or repair. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. This appliance has no user serviceable parts.
7. Always unplug this unit when not in use and before cleaning.
8. Always allow the appliance to fully cool down before cleaning or storing.
9. Never use this appliance for other than its intended use. The appliance is for household use only. Do not use outdoors.
10. Never let the power cord hang over the edge of the worktop, touch hot surfaces, become knotted, trapped or pinched.
11. Never place on or near a heat source.
12. Never leave this appliance unattended during use.
13. Never touch the exposed metal parts of the appliance during use as they will become very hot.
14. Never operate this appliance by means of an external timer or separate remote control system.
15. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction covering use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised – keep the appliance and its cord out of reach of children less than 8 years.
16. This appliance is intended to be used in the household and similar applications such as; farm houses; by clients in hotels, motels and other residential type environments. It is not suitable for use in staff kitchen areas in shops, offices and other working environments.
17. Do not leave the product left switched on for a prolonged period of time as this may damage the motor.
18. Ensure the plastic cup is not filled more than half way as this may cause the contents to spill over the edge.

## ELECTRICAL SAFETY – WARNINGS!

Read these instructions thoroughly before using this appliance or connecting it to the mains supply.

A 13 amp BS1362 ASTA approved fuse must be fitted.

There are no user serviceable parts inside this appliance.

In order to avoid hazard always refer servicing to a qualified service personnel.

Do not allow this product to be exposed to rain or moisture during use or storage.

Before switching on, make sure that the voltage of your electricity supply is the same as that indicated on the appliance's rating plate.

Connecting it to any other power source may cause damage.

The mains lead of this product is not replaceable by the user. If the mains lead is damaged, the entire appliance should be replaced by a suitable qualified person in order to avoid hazard.

In order to avoid hazard if the plug has to be changed because it is not suitable for your socket, or due to damage, it should be cut off and a replacement fitted by a qualified person. The old plug must be disposed of safely because inserting it into a 13 amp socket could cause an electrical hazard.

# BEFORE FIRST USE

Remove any packaging material and any promotional labels. Before using for the first time, clean any removable parts with a soft sponge and washing up liquid. Thoroughly rinse with clean water and dry.

---

## CARE AND CLEANING - WARNING!

- Always turn off the unit and allow to completely cool before cleaning.
- Never immerse any other part of your appliance, its cord or plug in water or any other liquid.
- Before cleaning your appliance, unplug it from the mains supply and allow it to cool down completely. Remove all detachable parts. Clean the outer surface with a soft damp cloth.
- Please take care when handling any sharp edges or parts during cleaning.
- Clean the detachable non electronic parts in lukewarm water with some washing-up liquid and rinse them under the tap.
- Clean the outer surface with a soft damp cloth.
- Do not use coarse or abrasive cleaners or steel wool to clean the product.
- Never spray or apply cleaning products directly on to the appliance. If necessary, apply cleaner to a soft cloth instead.
- Do not place this item in the dishwasher.

---

## STORAGE

Unplug the appliance before storage. Ensure that the appliance has completely cooled down and is clean before storing away. Store your appliance in its packaging box in a clean dry place. Do not allow this product to be exposed to rain or moisture during use or storage.

---

## SERVICING

In order to avoid hazard, if you drop or damage your appliance it should not be used until it has been examined by an authorised service centre or appliance technician. Always refer servicing to qualified service personnel.



## DIAGRAM

1. On/Off Switch
2. Cup Supporting Lock
3. Base
4. Rubber Feet
5. Plastic Cup
6. Whisk
7. Main Motor Unit

# OPERATING INSTRUCTIONS

1. Place unit on a flat, dry and protective stable surface. Make sure it is not in contact with a wall or curtains.



2. Insert the pin plug into the power socket.

3. Pour your chosen liquids, and other ingredients, into the plastic cup. Note: Non-liquid ingredients may cause damage to the whisk.



4. Place cup onto the axle, on the machine, ensuring it is secure.



5. Turn the switch on to mix.



6. When finished mixing, pour in to your glass and enjoy.



7. Once you have finished using the machine, disconnect the plug from the wall outlet.

**DO NOT** leave the MINIONS MILKSHAKE MAKER unattended or exceed the running time (5 minutes).

# MILKSHAKE

## INGREDIENTS:

- Minions Flavoured Banana Syrup
- Cold Milk

## ITEMS NEEDED:

- Minions Milkshake Machine
- Banana Flavoured Syrup
- Minions Plastic Cup
- Minions Paper Cups
- Paper Straws

## METHOD (PER SERVING):

1. Pour 20ml of Minions Milkshake Syrup into the plastic cup.
2. Add 200ml cold milk to the cup.
3. Place the Plastic cup into position on the machine.
4. Switch on the machine and let the syrup and milk mix.
5. Pour into your paper cups and enjoy using the paper straws.

Product Specification: 220V-240V, 50/60Hz, Power: 100W,  
**WARNING!** This is not a toy. Not suitable for dishwasher use. Remove all packaging before use. Wash the cup in warm soapy water before first use. Milkshake Maker blending pole to be wipe cleaned only. Unplug before cleaning. Do not immerse electrical parts in water or any other liquid. Keep out of the reach of children. Indoor use only. Instruction sheet and packaging must be retained since it contains important information. WEEE products should be disposed of by handing it over at a designated collection point. For more information about where you can drop off your waste product for recycling please contact your local authority.

**FOR DOMESTIC USE ONLY**

For customer services contact [Sales@Fizzcreations.com](mailto:Sales@Fizzcreations.com)

**ILLUMINATION**



© Universal City Studios LLC. All Rights Reserved.

V1

MADE IN CHINA



6 Commerce Way, Lancing, BN15 8TA, UK  
**Distributed in the EU by Fizz Creations GMBH**  
Stadtweide 17, Emmerich, 46446, DE  
[www.fizzcreations.com](http://www.fizzcreations.com)

UK Ltd. & GMBH © 2022 Fizz Creations Ltd. All rights reserved.